

operating instructions

Thank you for your purchase.

警告 Failure to follow safety precautions when using electrical appliances can result in fire or personal injury.

This instruction manual describes important precautions to prevent accidents and how to handle the product. Please read this instruction manual carefully. Please use the product safely. After reading, be sure to keep it in a place where you can easily access it at any time. Please see the back for "Safety" precautions.

MZ-E720

© 2003 Sony Corporation Printed in Japan

WALKMAN

MiniDisc

MDLP

"Walkman" , "WALKMAN" is a registered trademark of Sony Corporation representing headphone stereo products. WALKMAN is a registered trademark of Sony Corporation.

Check the accessories

- headphone
- Remote controller
- Charging stand
- ACPower adapter (3Vfor)
- Carrying pouch
- Rechargeable Nickel Metal-Hydride Battery
- Rechargeable Battery Case
- Battery Case
- Operating instructions
- Warranty
- Sony Customer Service Center Information

Names of each department


- Player**
- 1
 - 2
 - 3
 - Four
 - Five
 - 6
 - 7
 - 8
- 1 u button
2 Stereo mini plug
3 Rechargeable battery case
Four(VOLUME) +, - buttons
Five3Color NoticeLED
6 HOLDPrevents erroneous operationSwitch
7 Battery case terminals
8 Charging terminal
9 . and > buttons
qa: GROUPbutton
qs: strap
qd: OPENKnob
- Remote control/headphones**
- A
- B
- C
- D
- Five
- F
- 1 headphone
2 Stereo mini plug
3 VOL (Volume) +, - knob
Four(Stop) Button
FiveJog lever (.u/ENT >) (Group) +, -
6 Buttons
7 clip
8 HOLDPrevents erroneous operationSwitch
9 . and > buttons
qa: DISPLAYbutton
qs: P MODE/(Playback mode/Repeat) button
qs SOUNDbutton

- Charging stand**
- A
- 2
- 1 Disk View
2 Track number display
3 Test information display section
FourPlayback mode display
FiveVirtual Surround/
6Band Equalizer Display
6 Battery level indicator
- 1 Charging terminal
2 DC IN 3VJack (bottom)
- The buttons have a convex point. Please use it as a sign.


prepare

Please charge the rechargeable battery first before use.



1 Inserting the rechargeable battery

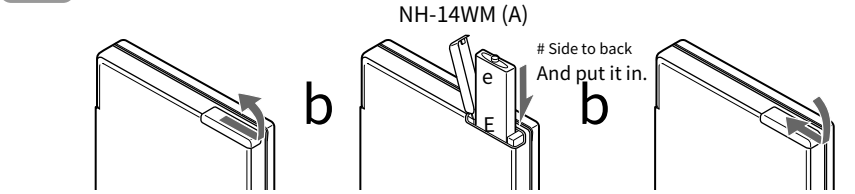


2 Charge

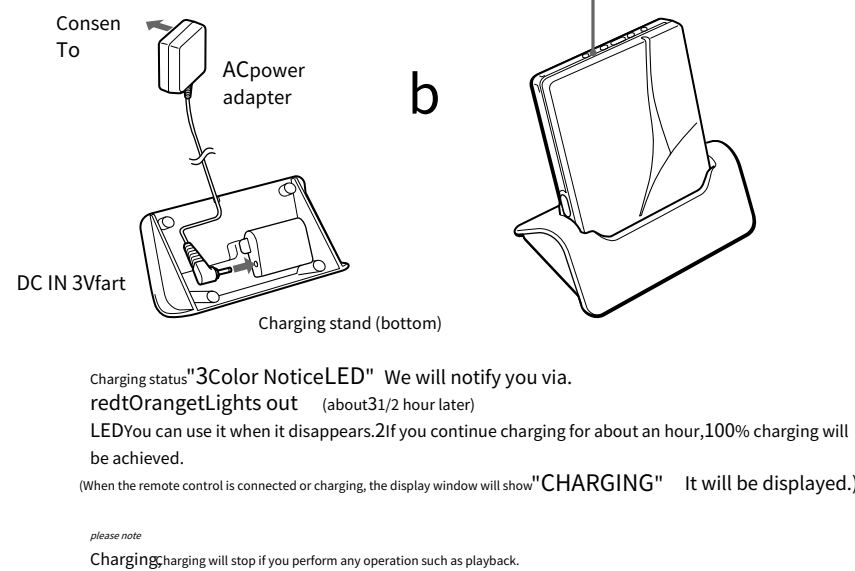

3 Connect the remote control and release the hold

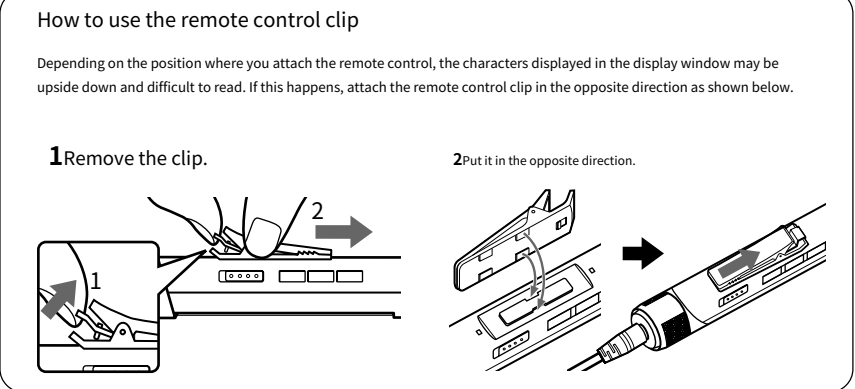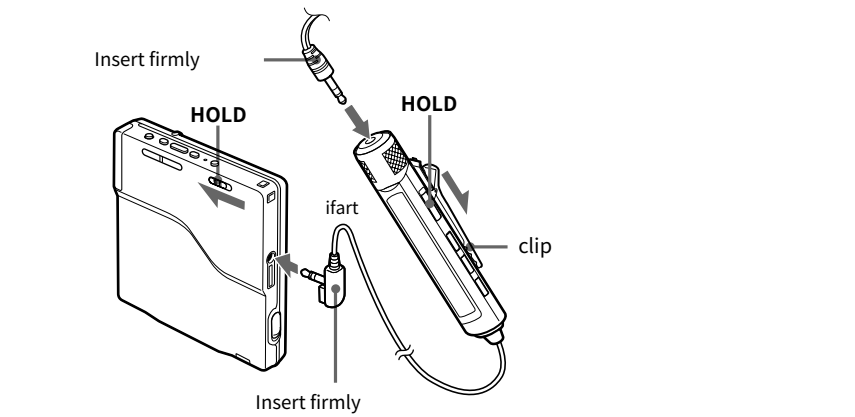

When using alkaline batteries

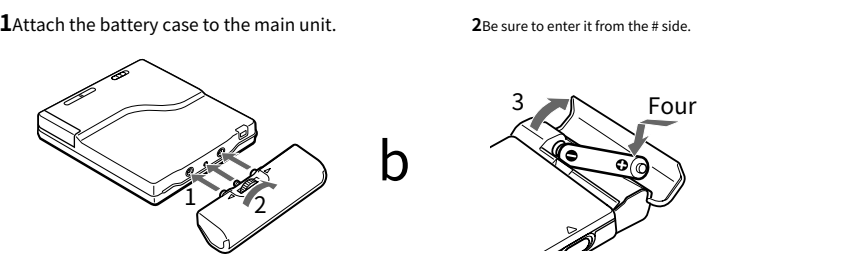


Sony alkaline batteries (sold separately) (single3shape)I'll put in a book. When used with rechargeable batteries, it provides long playback times.


Listening to MiniDiscs

1 Insert a mini disc

1 OPENSslide the knob in the direction of the arrow.2 Insert a mini disc.3 Close the lid.

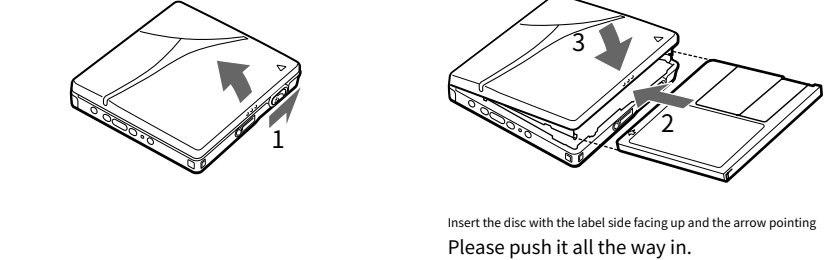

2 Reproduce

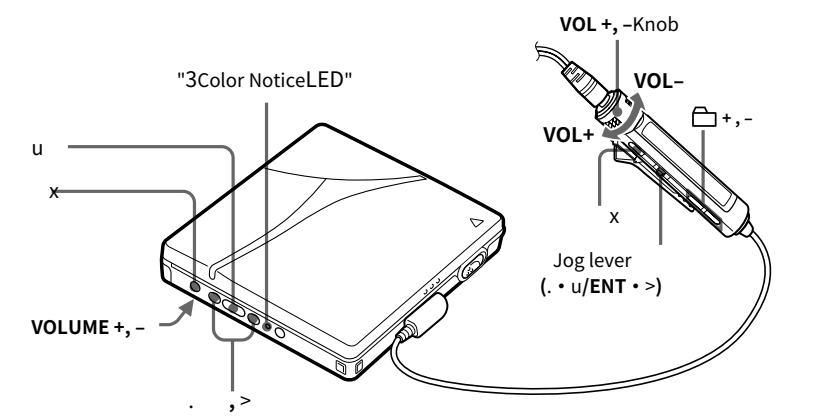

1 Press the jog lever (u) (On the main unit)Press. You will hear a confirmation beep.3Color NoticeLED" lights up red (Group setting) (The light will turn green if the disc is a LED)You can use it when it disappears.2If you continue charging for about an hour,100% charging will be achieved. (When the remote control is connected or charging, the display window will show "CHARGING" It will be displayed.)

please note

Chargingcharging will stop if you perform any operation such as playback.

To stop playback,xl press the button. You will hear a confirmation beep. The next time you play the disc, it will start from where you stopped. If you want to start playing from the beginning of the disc, press the jog lever (u)of2hold down the button for more than a second (on the main unit) uof2hold it down for more than seconds) and begin playback.


What to do in these situations	Operation (Confirmation sound)
Pause	uPress. (beep beep beep...) Press again to release.
The song you're listening to now or earlier	Slide the jog lever to the side. (beep beep)
Skip to the beginning of a song	Slide the jog lever towards >. (beep beep)
Rewind or fast forward while playing do	Slide the jog lever to the . or > side and hold it down. (On the main unit, press and hold . or >.)
Where you want to listen while checking the elapsed time	During pause, slide and hold the jog lever toward . or >.
Search for the disc you want to listen to by looking at the track number	While stopped, slide and hold the jog lever toward . or >.
TestSkip to the beginning of each song:	Press the + or - button.
Remove the disc:	xPress and then pressOPENSslide the knob.
During group playback, it will skip to the beginning of the group (group skip). For details, see "Group playback". Please refer to the.	
When you open the cover, the next playback will start from the beginning of the disc. (If the disc is registered in the personal disc memory, (Except when	

Playback mode display	Playback Status
(no display)	Normal playback(All songs on the disc)Times reproduction
1	1Playing song1The song currently being played (Play only)
SHUF	Bookmark playback (Bookmark)Only songs with (Play in order)
PGM	Shuffle Playback(Shuffle songs in no particular order Rearrange and play)
PGM	Program Playback(choose the song you want to listen to) (Arrange and play in order of preference)
SHUF	Group normal playback(group1mosquito For each group,1times played)
PGM	In-group shuffle playback (Sharing the songs in the group currently playing Play the next group in sequence. Shuffle the songs in the loop)
PGM	Group Program Playback (Arrange in order of preference by group. (Replace and play)

* This is displayed only for discs that are set as groups.

BVarious ways to listen

From here on, we will explain how to operate the remote control using the buttons. It mainly explains the work.

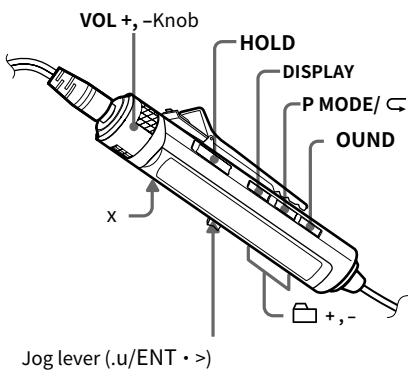

View song titles and song times

Song name, disc name, track number, track time, Number of songs recorded, group name, group You can check the total number of songs in the group.

A	B
Song number	elapsed time
Song number	Song title
Total number of songs in the group	group name
Total number of songs	Disk Name
Song number	Sound Mode
Song number	SP/LPmode

please note

- Group playback/normal playback status and operation status Depending on the state and settings, the display may not be selectable, may not be displayed correctly or may appear differently. Masu.
- SP/LPmode is only displayed during playback and will automatically revert to the elapsed time display after a while. vinegar.

Selecting the playback mode

1 P MODE/Press repeatedly.

Each time you press it, the display changes as follows: The video will be played back in the selected display state.



Playback mode display	Playback Status
(no display)	Normal playback(All songs on the disc)Times reproduction
1	1Playing song1The song currently being played (Play only)
SHUF	Bookmark playback (Bookmark)Only songs with (Play in order)
PGM	Shuffle Playback(Shuffle songs in no particular order Rearrange and play)
PGM	Program Playback(choose the song you want to listen to) (Arrange and play in order of preference)
SHUF	Group normal playback(group1mosquito For each group,1times played)
PGM	In-group shuffle playback (Sharing the songs in the group currently playing Play the next group in sequence. Shuffle the songs in the loop)
PGM	Group Program Playback (Arrange in order of preference by group. (Replace and play)

* This is displayed only for discs that are set as groups.

Listen to only the songs you like (Bookmark playback)

Bookmark your favorite songs You can then play just that song. However, you cannot change the order of the songs.

To add a bookmark

1 Play the song you want to bookmark, Jog lever2Press for more than seconds.

Bookmarks flash slowly

The bookmark is confirmed.

2procedure1Repeat to add bookmarks To go. In all20You can even add music.

To play a bookmarked song

1Now playing,P MODE/Press repeatedly hand,"PLAY?" Display the following.

2Press the jog lever. The smallest song number with a bookmark? Playback will start in order.

To delete a bookmark

Play the song you want to delete the bookmark from, Jog lever2Press and hold for more than seconds.

please note

The setting will be cancelled when you open the lid.

Listen to songs in the order you like (Program Playback)

1During playback,"PGM"appears. in,P MODE/Press repeatedly.

2Repeatedly move the jog lever to select a song. Select the number and press it to confirm.

Track number Program order

3procedure2Repeat to play the songs in any order. choose. In all20You can even program songs.

FourOnce you have made your selection, press the jog lever2 Press for more than seconds. Playback will begin in the programmed order.

To play a group program

The above steps1in" PGM" Display the Steps2-FourIn total,TenYou can program up to 1000 groups. Play in loop order.

Z

When playback is finishedOr when you stop midway toothe program settings remain.

please note

The setting will be cancelled when you open the lid.

To cancel

P MODE/of2Press and hold for more than seconds.


Z

During repeat playback,P MODE/Press to change the playback mode while keeping the repeat on. to come.

Group playback

Grouped disks and teeth?

MDUse a recorder to record one disc. The songs in the book were recorded in several groups. This refers to a disc that has been audio-edited.CDa Groups by album, artist, etc. This is useful when managing files separately. This unit can play back discs that are grouped. You can play each group separately.

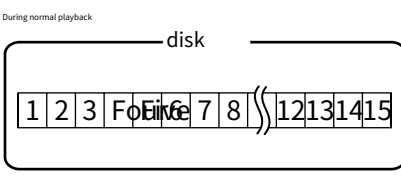

Group playback

group1 group2 group3

1 2 3 4 5 6 7 8 9 10 11 12 13 14 15

Songs that are not in the group areGroup --" is considered to belong to the

group1Play each group in order from After that, songs that are not in the group ("Group --") and then finish.

please note

Group settings cannot be made on this unit.MD Please set it using a recorder or similar.

Listen repeatedly(Repeat playback)

1Now playing,P MODE/Press repeatedly and display .

Skip to the beginning of a group To

Remote control operation

1Now playing, + Or Press -. Press the button to play the first song in the group. Press again to go to the previous group. Moves to the first song in the list.

Main unit operation

1Now playing,GROUPPress.

2Press . or > .

 
Z

"3Color NoticeLED" turns green during group playback Lights up, flashes orange when cueing to the beginning of a group To do.

Listen repeatedly(Repeat playback)

Normal playback or1You can play songs repeatedly, shuffle them, or play programs. can.

1During playback in your preferred playback mode, P MODE/of2Press for more than seconds. " " will light up.



To cancel

P MODE/of2Press and hold for more than seconds.

Z

During repeat playback,P MODE/Press to change the playback mode while keeping the repeat on. to come.

Make the sound you like (Virtual Surround6Band Equalizer)

Change the sound realism and set your preferred sound quality. You can set the following:2From the three effects1 You can choose one. V-SUR(Virtual Surround): Change the sense of realism of sound(Fourkinds) 6 BAND EQUALIZER(6Band Ikora lsa) : Change the sound quality(6kinds)

Select the sound realism (Virtual Surround)

1Now playing,SOUNDPress repeatedly, "V-SUR" Select.

2SOUNDof2Press for more than seconds.

3Slide the jog lever repeatedly to Select the type of round.

Every time you move the jog leverAand Bchanges to:

A	B
Studio	V-SUR S
Live	V-SUR L
Club	V-SUR C
Arena	V-SUR A

FourPress the jog lever to confirm.

Select the sound quality (6Band Equalizer)

1Now playing,SOUNDPress repeatedly, "SOUND" Select.

2SOUNDof2Press for more than seconds.

3Slide the jog lever repeatedly to Select the type of round.

Every time you move the jog leverAand Bchanges to:

A	B
Heavy	SOUNDH
Pops	SOUNDP
Jazz	SOUNDJ
Unique	SOUNDU
Custom1	SOUND1
Custom2	SOUND2

FourPress the jog lever to confirm.

To cancel the setup midway DISPLAYbutton orxthe button2seconds or more.

To cancel the setting

The above steps1inBSelect the state where nothing is displayed.

To delete a registration

Insert the disk you want to delete and select the contents. Check the steps above.3After that, slide the jog lever repeatedly until"ERASE?" will flash and press it to confirm. "ERASE OK" will be displayed and the disk setting information will be deleted. Do this on a disk that is not registered and,"NO ENTRY!" will be displayed.

please note

- disk20You can register up to 100,000 pages.20When the number of discs exceeds this limit, the oldest playing discs will be automatically deleted.
- A registered disc was edited on another device. If you try to record on or off the disc, it will be recognized as a different disc, and the registered information will become invalid.

 
Adjusting the sound quality to your liking

"Custom1" and"Custom2"for your preference You can memorize the sound quality of the

1The above steps1-3do the following: "Custom1" Ma Or "Custom2" Display the following.


2Press the jog lever to confirm.

3Repeatedly move the jog lever to select the frequency Select.



The frequencies are from the left:100Hz,250Hz, 630Hz,1.6kHz,4kHz,10kHzin vinegar.

FourVOLTurn the knob repeatedly to adjust the level. Adjust.

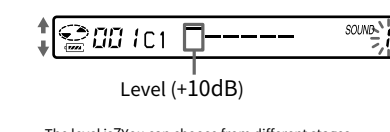

Fiveprocedure3andFourrepeat.

6Press the jog lever to confirm.

BVarious settings

Record settings for each disc Record (Personal Disk Memory)

Register the disk setting information. If you reinset the disc, the display TDisc Mem" is displayed and the setting information It will be called automatically. The following setting information can be registered:

- Volume
- Playback Mode
- Bookmark Settings
- Program Settings
- Virtual Surround/6Band Equalizer Settings
- Playback Speed(Digital pitch control)

1DISPLAYof2Press for more than seconds.

2Slide the jog lever toUseful"of Select and press to confirm.

3Slide the jog lever toDisc Mem"Select and press to confirm. "Entry?" will flash.

FourPress the jog lever to confirm. "Entry OK" is displayed, and the current device The disk setting information will be registered.

To set up on the device

Now playing,HOLDswitchNShift in the direction ofVOLUME-While pressing the button, HOLDswitchNand slide it in the opposite direction.

AVLSTo cancel

For the remote control, follow the steps above.Fourin "AVLS Off"Select and press the jog lever. On the console, during playbackHOLDswitchN Shift in the direction ofVOLUMEPress the + button while doing,HOLDswitchNand slide it in the opposite direction.

Change the playback speed (Digital pitch control)

When you want to change the playback speed for language learning, etc. This is convenient. Only the playback speed is changed without changing the pitch. to change. + 100%~-50%For up to13You can choose the playback speed in stages.

1During playbackDISPLAYof2Press for more than seconds vinegar.

2Slide the jog lever toUseful"of Select and press to confirm.

3Move the jog lever "SpeedCtrl" Select and press to confirm. The playback speed setting screen will appear. Please listen to the sound and make your selection.

FourMove the jog lever repeatedly to change the speed. Select the degree and press to confirm. "SC" It will be displayed.

To cancel the setup midway

DISPLAYbutton orxthe button2Press and hold for more than seconds.

Z

When you open the lidThe setting is0%Return to.

please note

When you change the playback speed, During playback,"Brrrrr" That I hear sounds, It sounds like an echo This may be the case.

Reduces sound leakage and is gentle on the ears

Make the better (AVLS—Auto Volume Limiter System - Comfortable Volume

Sound leakage and pressure on the ears due to the volume being too high The sense of pressure and the danger of not being able to hear the sounds around you This reduces noise and allows you to listen at a more comfortable volume. can.

1Now playing,DISPLAYof2Press for more than seconds vinegar.

2Move the jog lever "Options"of Select and press to confirm.

3Slide the jog lever toAVLS" of Select and press to confirm.

FourSlide the jog lever toAVLS On"Select and press to confirm. "AVLS On" will be displayed.


To set up on the device

Now playing,HOLDswitchNShift in the direction ofVOLUME-While pressing the button, HOLDswitchNand slide it in the opposite direction.

AVLSTo cancel

For the remote control, follow the steps above.Fourin "AVLS Off"Select and press the jog lever. On the console, during playbackHOLDswitchN Shift in the direction ofVOLUMEPress the + button while doing,HOLDswitchNand slide it in the opposite direction.

BVarious Settings (continued)

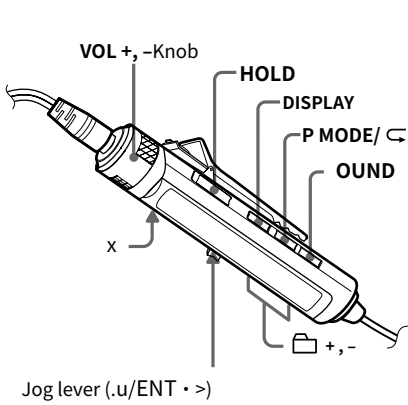

Turn off the confirmation sound

You can turn off the confirmation sound from the remote control and the main unit.

- 1DISPLAYo2Press for more than seconds.
- 2Move the jog lever "Options"of Select and press to confirm.
- 3Slide the jog lever toBeep" of Select and press to confirm.
- FourSlide the jog lever toBeep Off"Select and press to confirm.

To cancel the setup midway

DISPLAYbutton orxthe button2Press and hold for more than seconds.

To play a confirmation tone

The above stepFourin "Beep On" Select

Remote control display window back Turning the light on/off

- 1DISPLAYo2Press for more than seconds.
- 2Move the jog lever "Options"of Select and press to confirm.
- 3Move the jog lever "Backlight" Select and press to confirm. do.
- FourSlide the jog lever to select the setting.

display	setting
Auto	Lights up during operation. Turns off after a while. (Default setting)
On	Always on during operation
Off	Always off

FivePress the jog lever to confirm.

Quickly listen to sounds (Quick mode)

After pressing the play button or cueing a song After that, you can quickly listen to the playback sound.

- 1DISPLAYo2Press for more than seconds.
- 2Move the jog lever "Options"of Select and press to confirm.
- 3Move the jog lever "Power Mode" Select and press to confirm do.
- FourSlide the jog lever toQuick" of Select and press to confirm. "Quick" will be displayed.

To cancel the setup midway

DISPLAYbutton orxthe button2Press and hold for more than seconds.

To cancel the setting

The above stepsFourin "Normal" Select

- please note
- settingsQuick" When set to, the screen will be blank. Even when the device is not turned on, it consumes power internally. When the battery is completely depleted, The internal power supply to the unit will be turned off immediately.
- No operation is performedincluding opening and closing the lid) Rechargeable nickel-metal hydride batteryNH-14WM(A) (100%When chargingAbout1Weekly, alkaline batteries (LR6(SG)) About2weeks, and approximately 1 week with a combination of rechargeable nickel-metal hydride batteries and alkaline batteries.You can retain the Quick Mode status for a week.

Reduce battery consumption (Power saving function)

Function to maximize battery life The main unit3Color NoticeLED" Always off or shortly after operating the remote control Turn off the display to reduce battery consumption Masu.

- 1DISPLAYo2Press for more than seconds.
- 2Move the jog lever "Options"of Select and press to confirm.
- 3Move the jog lever "Power Mode" Select and press to confirm do.
- FourMove the jog lever "PowerSave" Select and press to confirm do. On the main unit,3Color NoticeLED" will disappear.

To cancel the setup midway

DISPLAYbutton orxthe button2Press and hold for more than seconds.

"3Color NoticeLEDTo add "

The above stepsFourin "Normal" Select

Preventing erroneous operation (Hold function)

- 1Remote controlHOLDin the direction of >, On the main unitNShift in the direction. Remote controlHOLDFlip the switch
- The remote control operation buttons are the same as those on the main unit.
- HOLDSlide the switch to change the operation of the main unit.
- The operation button will no longer work.

HOLDTo cancel

HOLDSlide the switch in the opposite direction to the arrow. To do.

Reduce skipping (G-PROTECTION)

G-PROTECTIONImpact during jogging The skip guard function was developed with the It is more effective than conventional skip guards. It is becoming stronger.

- please note
- In the following cases: There may be skipping of sound.
- When strong shocks are applied continuously
- Scratched or dirtyMDWhen listening to

- FourSlide the jog lever toQuick" of Select and press to confirm. "Quick" will be displayed.

BPower Supply

Rechargeable batteries and dry cell batteries

When is the time to change?

During use, the battery level indicator on the remote control On the display or on the unit3Color NoticeLED" will be displayed. We will inform you by display.

- Remote control display window
- The remaining charge is low.
- The battery is low.
- There is no battery remaining.LOW BATT" display will flash and the power will be turned off.

- On the main unit,3Color NoticeLED" display
- LEDLighting
- LEDStrobing
- LEDFast blinking
- The battery is low.
- Battery is empty. To make it easier.LEDturns off, power supply will be cut off.

- please note
- 100%Even if an empty rechargeable battery is inserted, the remaining charge indicator may not light up completely. However, the charge amountThe shorter the charging time, the longer it will last. The time will be shorter.
- When fast forwarding/rewinding or in extremely cold places When using, the remaining charge may be high or low. It may be displayed as a flick.

Battery life(1)(JEITA2)			
Battery used	SP Stereo (usually)	LP2 Stereo	LP4 stereo
Rechargeable Nickel hydride battery NH-14WM(A) (100% charged)	about38 time	about47 time	about60 time
Alkaline batteries LR6(SG)3	about63 time	about79 time	about99 time
Rechargeable Nickel Water Batteries and alkaline Dry cell batteries(Use in combination with)	about98 time	about124 time	about155 time

- 1Power saving functionONThe hour value.
- 2JEITA(Sony Electronics and Information Technology Industries Association) standard.M.D.W.(Uses minidiscs from the series)
- 3Sony alkaline batteries made in JapanLR6(SG) is used for measurement.

Battery life is Depending on the type, it may be shorter.

Sockets (Household power supply) Connect to

ACConnect the power adapter to the charging stand. When you place the device on the rechargeable battery It can be used without batteries.

Bothers

Precautions for Use


Do not disassemble Laser used in minidisc players The light can be dangerous if it hits your eyes.

Do not touch the lens

If the lens becomes dirty, sound skipping may occur or playback may become impossible. It may be missing or disappear. Also, when removing the disc, be sure to Do not open the lid except for inserting.

ACAAbout the power adapter (Attached (For use with charging stations only)

- This product includesACPower adapter/sold separatelyACPower adapterAC-E30LPlease use products other than those listed above, and it may cause a malfunction.

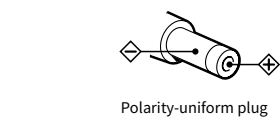

- The label that comes with the disc is in a position other than the designated position. Do not stick it on the label. Make sure to paste it firmly to fit the size.
- ACWhen using the power adapter, please note the following:
 - Install the unit in a bookshelf, built-in cabinet, etc. Do not place it in a narrow space.
 - To avoid the risk of fire or electric shock, Do not use in hot or humid places. Do not place a vase or other object containing water on top of the unit. Do not place anything containing

About charging

- The included charging stand is designed exclusively for this unit and cannot be used to charge other devices.
- The included charging stand does not support batteries other than those specified. Do not charge.
- Charging is +FiveC~+40Please do this in a location that is °C.
- During charging, the charging stand and rechargeable battery may become hot. But there is no danger.
- Rechargeable batteries that have not been used for a long time or when you first purchased them In ponds, the duration may be short.
- This is due to the characteristics of the battery and can be restored by charging and discharging it several times.
- Repeat this until it is fully charged.
- The usable time of the rechargeable battery is limited even if it is fully charged. When it is about half the normal amount, use a new charger. Replace it with a rechargeable battery.
- Once charging is complete, remove the device from the charging stand as soon as possible.ACplug the power adapter from the wall outlet. Leaving it plugged in for an extended period of time may reduce the battery performance.

Disposal of rechargeable batteries in Japan Nickel-metal hydride batteries are You can remove it. Nickel-metal hydride batteries are Use insulating tape such as cellotape tape Stick tape on it and sign the recycling agreement. Please take it to a power store.

Ni-MH

Collection, recycling and recycling of rechargeable batteries For participating stores, please contact the Battery Association of Japan Page: <http://www.baj.or.jp/>Please refer to So lame.

Handling

- Do not drop the product or subject it to strong shocks. Doing so may cause a breakdown.
- Do not pull the cord of the remote control or headphones too hard. Please do not do so.
- Do not place in the following locations:
 - Where temperatures are very high
 - Places exposed to direct sunlight or near heating appliances
 - Inside a car with the windows closed(specially in summer)
 - Humid places such as bathrooms
 - Near magnets, speakers, televisions, or other magnetic objects
 - Dusty places

Temperature Rise

When charging or using the product for an extended period of time, your body temperature may rise, but this is not a malfunction. There is no.

Operation noise

This unit is designed to operate in a power-saving mode. Therefore, there will be intermittent noise during operation. This is not a malfunction.

Handling of MiniDiscs

- The minidisc itself is housed in a cartridge. This makes it easy to handle without worrying about dust or fingerprints. However, the cartridge Dirt or warping on the "You can enjoy beautiful sounds forever." Please note the following points to ensure
 - Do not touch the mini disc directly. Do not open the shutter by hand. if you force it open it will break.

Do not touch the lens

If the lens becomes dirty, sound skipping may occur or playback may become impossible. It may be missing or disappear. Also, when removing the disc, be sure to Do not open the lid except for inserting.

ACAAbout the power adapter

- (For use with charging stations only)
 - This product includesACPower adapter/sold separatelyACPower adapterAC-E30LPlease use products other than those listed above, and it may cause a malfunction.
- Shutter Cartridge
- When transporting or storing the device, use the case.
 - Can
 - About the location In places exposed to direct sunlight or high temperatures Do not place in a dry place or in a humid place. Do not leave the disc on a beach or in other places where sand may get into the disc. please.
 - Regular maintenance Dust and dirt on the cartridge surface Wipe it off with a dry cloth.

- The label that comes with the disc is in a position other than the designated position. Do not stick it on the label. Make sure to paste it firmly to fit the size.
 - ACWhen using the power adapter, please note the following:
 - Install the unit in a bookshelf, built-in cabinet, etc. Do not place it in a narrow space.
 - To avoid the risk of fire or electric shock, Do not use in hot or humid places. Do not place a vase or other object containing water on top of the unit. Do not place anything containing
- About headphones
- The supplied headphones may not be able to produce sound if the volume is turned up too high. If the volume is too high, it may cause noise around you. Be careful not to cause trouble to others. Turn up the volume in noisy places. It's common, but when do you listen with headphones? The volume is loud enough so you can respond when someone calls out to you. Please use this as a guide.
 - If you experience any skin irritation while using the included headphones, discontinue use immediately and consult a doctor or Please contact our Customer Service Center.

About the remote control

- The remote control provided is for this unit only. Remote controls provided with other devices cannot be used to operate this unit.
- plug.
- If you lose your remote control clip, Raise store or attached "Sony Consultation Center Information InsidePlease contact your nearest service center at Sai.

About the battery case

The included battery case is for use only with this unit.

In the unlikely event of a malfunction, do not open the product and Please contact your dealer or Sony service center. So lame& you may have malfunctioned while it was in the unit. If a malfunction occurs, please contact your dealer or Sony service center for a refund or replacement of the product. We recommend that you consult with the disk inserted. I recommend it.)

Care

When the surface becomes dirty If the surface becomes dirty, wipe it with a soft damp cloth. Wipe lightly with a cloth, then wipe dry. Do not use detergent, benzine, or alcohol as these may damage the surface. So please do not use it.


Headphone and remote control plugs Care instructions

To ensure you always get the best sound possible, Wipe occasionally with a soft, dry cloth to keep it clean. If it is dirty, it may cause noise or sound dropouts. This may be a cause.



Care of the terminals

Periodically clean all terminals (such as the charging terminal on the main unit and the terminals on the battery case) with a cotton swab or soft cloth.


Battery compartment

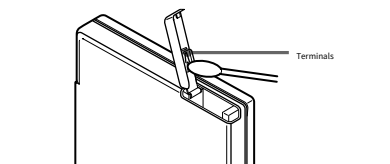

Battery case (included)

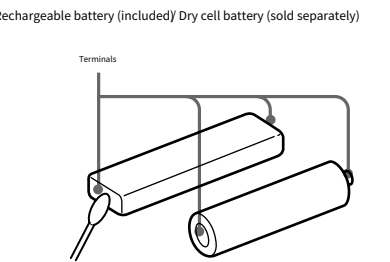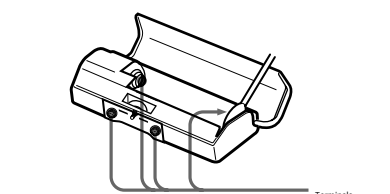

Charging stand (included)

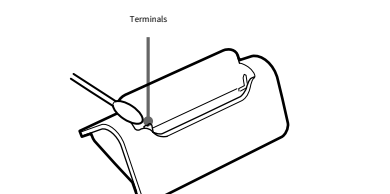

- Noisy
 - Do not place the device near a television or other object with a strong magnetic field. It is.
 - bKeep it away from televisions etc.
- A momentary noise is heard
 - LP4(FourDouble modeSound recorded in stereo It's playing. bLP4When playing back stereo recorded sound, You may hear a strange noise.

- unable to charge
 - The charging terminals on the charging stand are dirty. bWipe the charging terminal with a dry cloth.
 - There is no rechargeable battery inserted. binsert the rechargeable battery.

- The temperature in the charging area is too high. (Remote N "CannotCHG" The display will appear.) Or too low. (on the remote controlSLOW CHG" The display will appear.) bCharging is +FiveC~+40Please go to the °C location. Sai.

- Group function not working
 - A disk that is not set as a group is being used. bUse disks with group settings. So lame.
- Bookmark playback is not possible (remote control "NO MARK" The display will appear.)
 - Without bookmarks I tried to select bookmark playback. bInsert bookmark us. bListen to all the songs you like" "book To make a mark Please refer to the.

- Does not accept operation
 - The battery is not inserted correctly. battery3Please reinsert the terminal and a terminal correctly. please.
 - No disc inserted (on the remote control)NO DISC" The display will appear.) bPlease insert a disc.
 - The hold function is active (Operation buttons on the unit Press to switch to the remote control"HOLD" The display will appear.) bHOLDFlip the switch in the opposite direction to the arrow. Please cancel the hold function.

- A button on the unit was pressed while setting up using the remote control. (Pressing the button on the unit will "MENU" The display will appear.) bPlease end the operation using the remote control.
- (Water droplets are present inside.) bRemove the disc and wait a few hours. Sai.

- The rechargeable battery or dry battery is depleted. (Remote To the co"LOW BATT" The display will appear.) bCharge the rechargeable battery or replace the dry batteries with new ones. Please exchange it for something else.
- There is a blank disc inserted (on the remote control)BLANKDISC" The display will appear.) bPlease insert a recorded disc.
- The disc is damaged (on the remote control)"READ ERR" or "TOC ERR" The display appears (.) bReinsert the disc. The message still appears. If this happens, replace it with another disc.

- During use, the product may be subjected to strong noise due to shock, excessive static electricity, or abnormal power supply voltage caused by lightning. Ta. bPlease try again using the following steps.
 - 1 Disconnect all power sources.
 - 2 about30Hold it for a second.
 - 3 Connect the power.

No sound from headphones

- The headphones are not plugged in securely. binsert it firmly into the jack.
- bplug the headphones securely into the remote control. Please drink.
- AVLSThe function is working. bAVLSPlease cancel. "sound If it reduces leakage and makes the sound easier on the ear.Visit please.

Normal playback is not possible

- Repeat playback is specified. bRemote controlP MODE/ C the button2Move than a second Press and hold Crepeat) Display Please turn it off and then start playing.

DiskI Can't play from track list

- Last time I played it, I stopped halfway through the disc. bOpen the lid or press the Jog lever2Hold it down for more than a second please.1You can play from the track list.

Sound cuts out during playback

- It is placed in a location with a lot of vibration. bUse in a place with minimal vibration.
- Narration, intro, etc.If the recording time of a song is extremely short, the sound may be interrupted.

- Noisy
 - Do not place the device near a television or other object with a strong magnetic field. It is.
 - bKeep it away from televisions etc.

- A momentary noise is heard
 - LP4(FourDouble modeSound recorded in stereo It's playing. bLP4When playing back stereo recorded sound, You may hear a strange noise.

- unable to charge
 - The charging terminals on the charging stand are dirty. bWipe the charging terminal with a dry cloth.
 - There is no rechargeable battery inserted. binsert the rechargeable battery.

- The temperature in the charging area is too high. (Remote N "CannotCHG" The display will appear.) Or too low. (on the remote controlSLOW CHG" The display will appear.) bCharging is +FiveC~+40Please go to the °C location. Sai.

- Group function not working
 - A disk that is not set as a group is being used. bUse disks with group settings. So lame.

- Bookmark playback is not possible (remote control "NO MARK" The display will appear.)
 - Without bookmarks I tried to select bookmark playback. bInsert bookmark us. bListen to all the songs you like" "book To make a mark Please refer to the.

Main Specifications
format
MiniDisc Digital Audio System
Regenerative reading method
Non-contact optical reading (using semiconductor laser)
laser
GaAlAs MQWdiode, λ=790 nm
Rotational Speed
about300 rpm -2,700 rpm
Error correction method
ACIRC(Advanced Cross Interleaved Reed-Solomon Code)
Sampling Frequency
44.1kHz
coding
ATRAC(Adaptive Transform Acoustic Coding) ATRAC3 — LP2/LP4
Modulation Method
EFM
Number of Channels
stereo2Channel monaural1Channel
Frequency characteristic
20-20,000Hz±3 dB
Output terminal
Headphones: Stereo mini jack Maximum output5mW+5mW*(16 ohms)
power supply
Rechargeable battery (included:NH-14WM (A), 1.2 V,1350mAh (MIN),Ni-MH)1Individual Alkaline batteries (single3Shape1Book External power jackCharging stand) Rating DC 3V ACPower adapter (For charging stations, included)AC100V,50/60Hz

- Battery life
- When to replace rechargeable batteries and dry batteryof Please look.
- Body dimensions
- about71.5×77.9×13.9 mm (Width/height/depth, not including protrusions)
- Maximum external dimension
- about74.1×80.0×15.1 mm (Width/Height/Depth)

- http://www.sony.co.jp/SonyDrive/ お客様ご相談センター
- ナビダイヤル・・・・・・0570-00-3311 (全国どこからでも国内通話料がかかります)
- 携帯電話・PHSでのご利用は 03-5448-3311 (ナビダイヤルがご利用できない場合はこちらまでお電話ください)
- FAX・・・・・・0466-31-2595 受付時間：月～金 9:00～20:00 土・日・祝日 9:00～17:00 お電話は自動音声応答にてお受けしています。

- The product category of this machine is(Audio) — [U Oukman] is.
- When contacting us, please let us know the following:
 - Model name
 - Consultation details>Please provide as much detail as possible
 - Date of purchase

- http://www.sony.co.jp/SonyDrive/ お客様ご相談センター
- ナビダイヤル・・・・・・0570-00-3311 (全国どこからでも国内通話料がかかります)
- 携帯電話・PHSでのご利用は 03-5448-3311 (ナビダイヤルがご利用できない場合はこちらまでお電話ください)
- FAX・・・・・・0466-31-2595 受付時間：月～金 9:00～20:00 土・日・祝日 9:00～17:00 お電話は自動音声応答にてお受けしています。

- http://www.sony.co.jp/SonyDrive/ お客様ご相談センター
- ナビダイヤル・・・・・・0570-00-3311 (全国どこからでも国内通話料がかかります)
- 携帯電話・PHSでのご利用は 03-5448-3311 (ナビダイヤルがご利用できない場合はこちらまでお電話ください)
- FAX・・・・・・0466-31-2595 受付時間：月～金 9:00～20:00 土・日・祝日 9:00～17:00 お電話は自動音声応答にてお受けしています。

- mass
- about64g(only a main part)
- about91g(including rechargeable batteries)
- value.

The specifications and appearance of this unit are subject to change without notice for improvement purposes. It may be subject to change, note that.

This machine isDolby Laboratories in the U.S. and Internationally This product is licensed under a national patent.

- Optional accessories
- ACPower adapterAC-E30L Rechargeable Nickel Metal Hydride BatteryNH-14WM Stereo headphones"MDR-E888SP, MDR-EX71SL,MDR-Q555SLSuch Active SpeakersSRS-ZS510, SRS-Z305such
- *About stereo headphones
 - The headphones areWhether you connect to a jack or a remote control, Please buy the one with rug, Micro plug cannot be used.
 - This may not be compatible with some models of noise cancelling headphones. (For Sony products,MDR-NC20,MDR-NC11, MDR-NC5)

- The following models cannot be used in conjunction with this unit.
- Rotary CommanderRM-WMC1 MDLabel printerMZP-1 I CMemory Repeat Learning MDcontrollerRPT-M1

Warranty and after-sales service

- Warranty
- This product comes with a warranty. Then, pick it up at the store where you purchased it. Please do so.
- Please fill in the required information and check the contents. Please keep it safe.
- The warranty period begins from the date of purchase.1Annually.

After-sales service

- If you're not feeling well, check it out first Please check this manual again. So lame.
- If you are still having trouble, contact our service center. Please contact your store of purchase or the attached "Sony Consultation Center "Guide to Your nearest Sony service center Please contact us.
- Repairs during the warranty period The repair was done based on the warranty. For details, please refer to the warranty card.
- Repairs after the warranty period has expired If the functionality can be maintained by repair, if desired, we will provide repairs for a fee.
- Parts retention period We offer portable minidisc players Repair parts for performanceTo maintain the functionality of the product (Parts required forAfter production was discontinued 8The part retention period is the repair period. The retention period will be extended.
- Even after the repair, depending on the part that is broken, it may be possible to repair it. Please contact your dealer or service center. Please consult with our customer support desk.

Contact Information

- If you have any questions about this unit,Technical questions, Consultation when you think you have a disability or details, please see below. Please let us know.
- The product category of this machine is(Audio) — [U Oukman] is.
- When contacting us, please let us know the following:
 - Model name
 - Consultation details>Please provide as much detail as possible
 - Date of purchase

警告 For your safety

Sony products are designed with safety in mind. However, all electrical products can be dangerous if used improperly and can result in fire, electric shock, or other personal injury. To prevent accidents, be sure to observe the following:

Observe safety precautions

Please read the following precautions carefully. They contain general product precautions.


Check regularly

1A yearThe degree isACCheck to see if there is any dust accumulated between the power adaptor plug and the outlet, or if the power adaptor is still being used in a malfunction state.

Do not use if broken

The operation becomes strange,ACif you notice that the power adaptor, charging stand, or other part is damaged, immediately contact your retailer or a Sony service representative for repair.

If an abnormality occurs

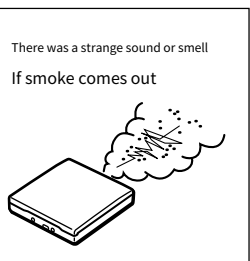

- 1power off
- 2ACPower adapter Unplug the
- 3Purchased from a store or Repair at the knee service desk Request a consultation

Do not allow water or foreign objects to get inside the unit.

If water or foreign objects get into the device, it may cause a fire or electric shock. If water or foreign objects get into the unit, immediately turn off the switch and ACUnplug the power adapter from the outlet and contact your retailer or a Sony service center for assistance.

Domestic aircraft will not be used overseas Other than the World ModelACThe adapter is for use in Japan only. 100VUsing the unit overseas with a different power supply voltage may result in fire or electric shock.

Contact Information

- If you have any questions about this unit,Technical questions, Consultation when you think you have a disability or details, please see below. Please let us know.
- The product category of this machine is(Audio) — [U Oukman] is.
- When contacting us, please let us know the following:
 - Model name
 - Consultation details>Please provide as much detail as possible
 - Date of purchase

With wet handsACDo not touch the power adapter or charging stand. This may cause electric shock.

please Used rechargeable batteries are a valuable resource. Please dispose of the terminals (metal parts) by taping them off, and bring them to a participating rechargeable battery recycling store.

Do not charge or leave the battery near a fire or in direct sunlight. The internal temperature will rise and may cause a fire or malfunction.

Do not place any metal objects on the charging station. If the terminals of the charging stand come into contact with metal, a short circuit may occur and the charging stand may become hot.

Do not carry or store the device or battery case together with metal objects. If you carry or store the battery together with metal objects such as coins, key necklaces, etc., it may short circuit and generate heat.

If you do not observe the following precautions,Injury or aroundHousehold goods damageWe may give you a

Do not listen at high volumes for long periods of time Listening to music for long periods of time at a loud volume that irritates your ears can have a detrimental effect on your hearing. Be particularly careful when listening to music with headphones. Listen at a volume that allows you to respond when someone calls out to you.